


J-link RTT Viewer Manual

Rev. 2.0


1. Install JLink_Windows_V684a.exe on a Window10 computer.
 2. Install the battery, power on the tracker and connect the device with the programming cable.
- Please program the tracker with the debug firmware if necessary. For details, refer to “How to program firmware”.

Definition of the pins on
Asset Management
Tracker


VCC
SWDIO
GND
SWCLK

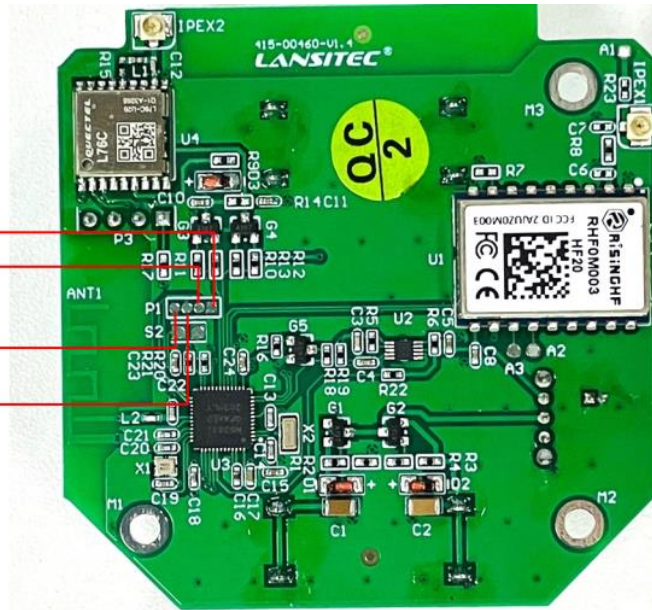


3. Open J-link RTT Viewer.

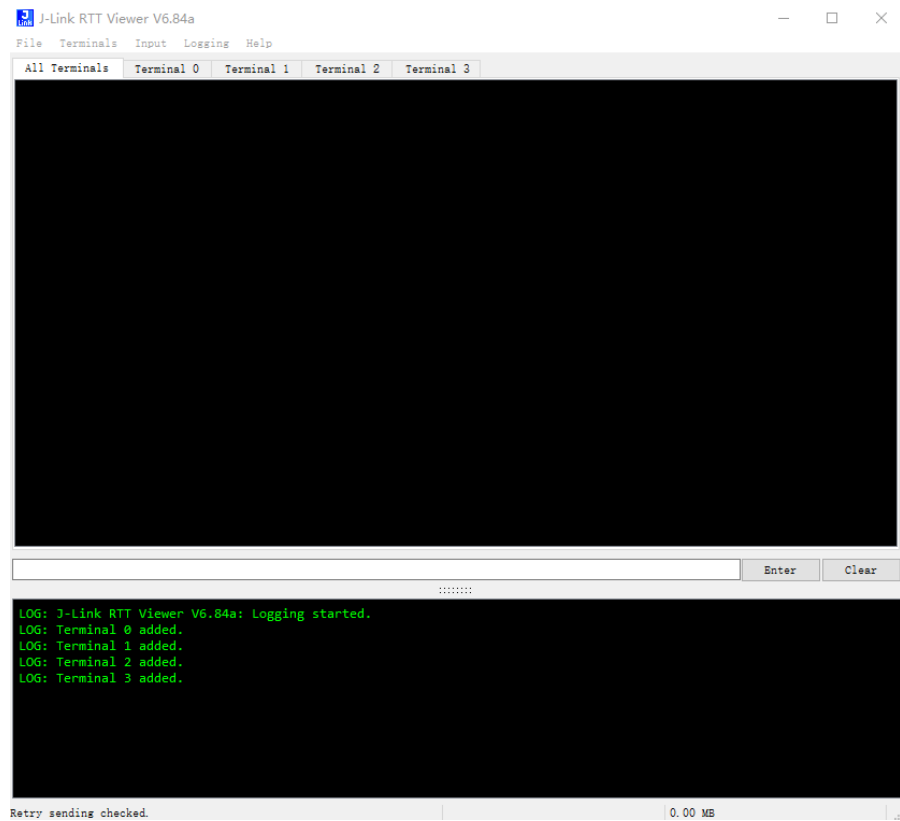


4. Click on the File -> Connect

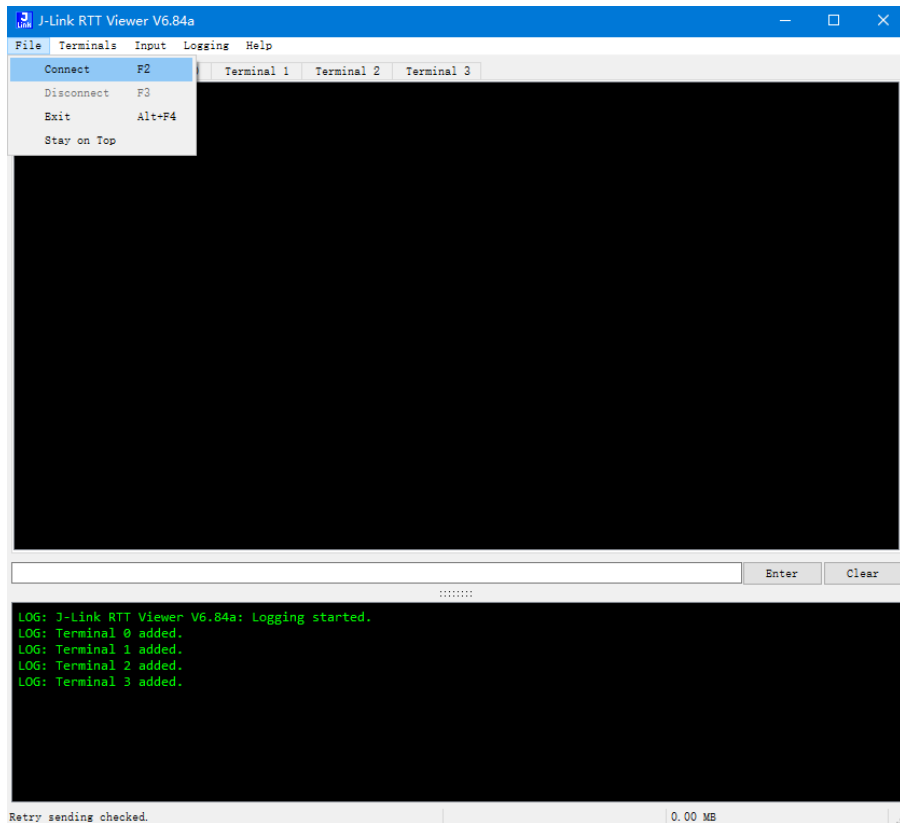


5. Configuration

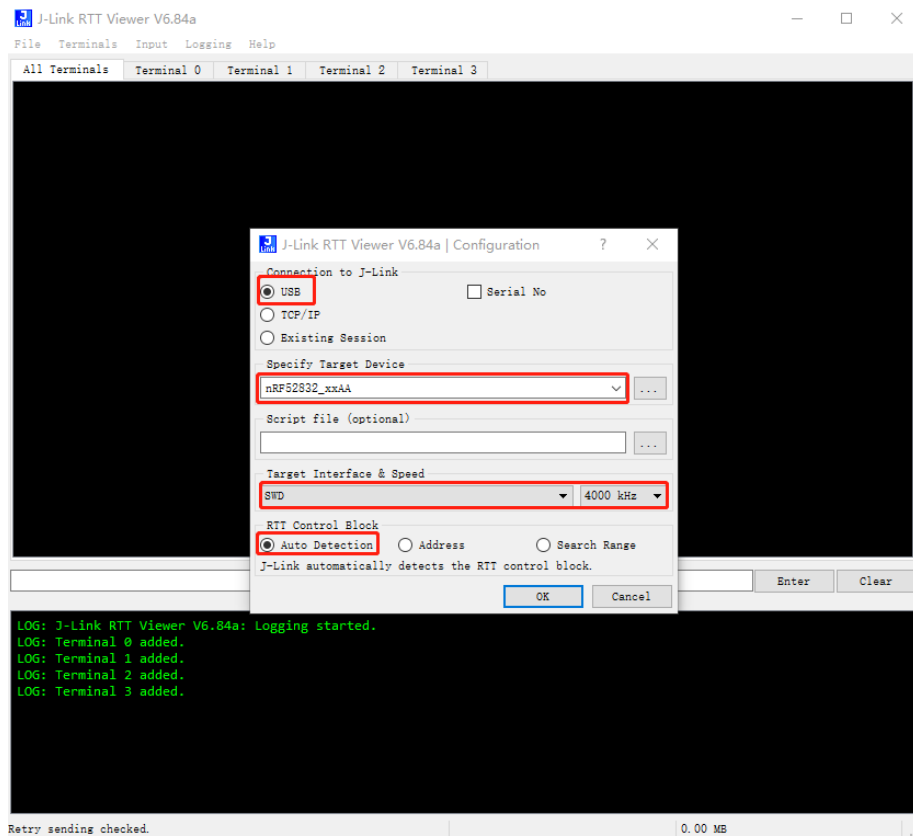

6. Connect successfully and print the log

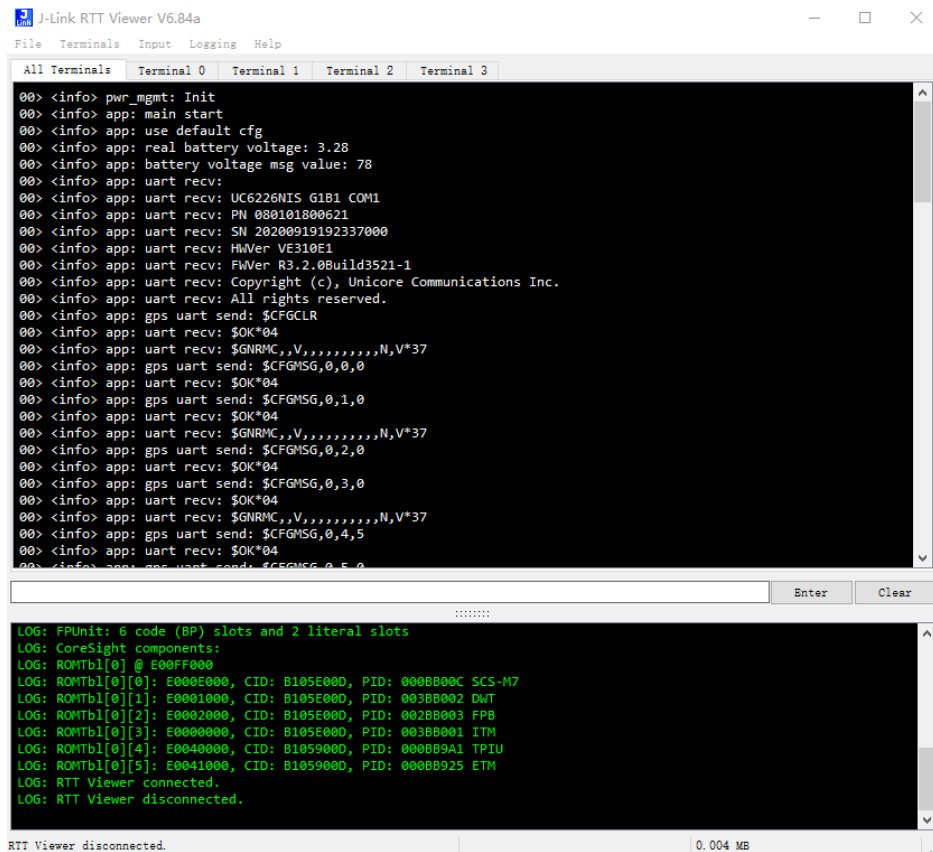

7. Save the log, Click on the Logging -> Start Terminal Logging

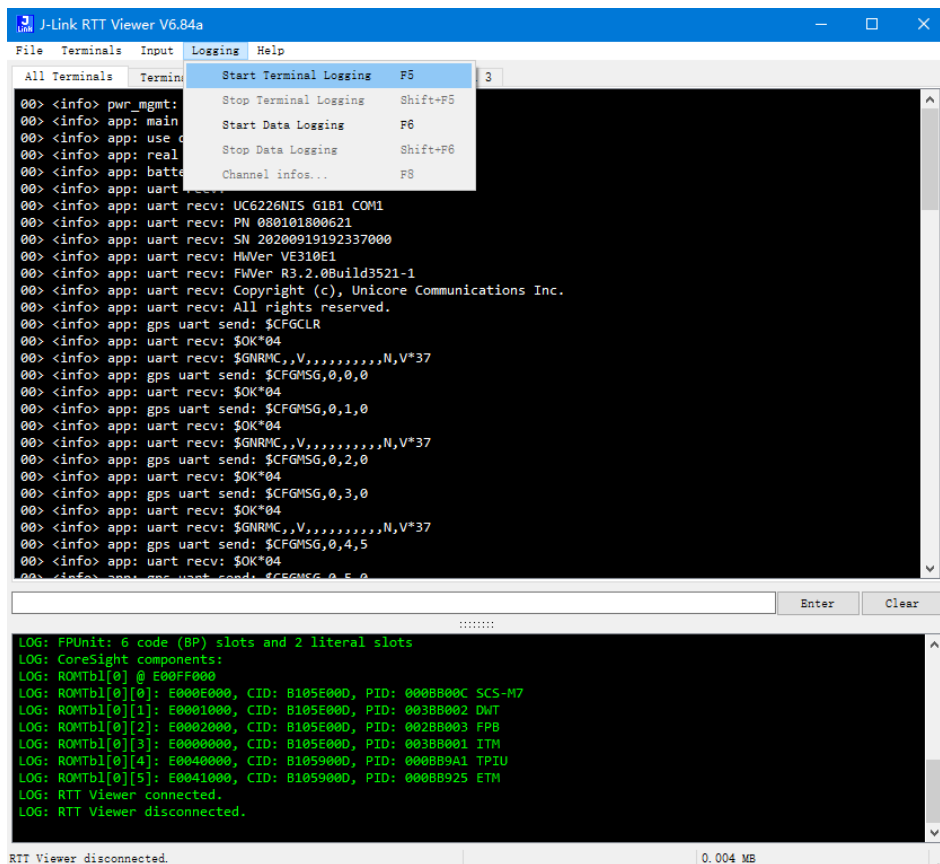

8. Click Stop Terminal Logging to stop saving log

