

How To OTA Lansitec Device

Download and install the App “nRF Connect”

- ✧ To the OTA Lansitec Device, you need to download an app called "nRF Connect".
- ✧ You can directly search for nRF Connect in the Google Play Store and Apple App Store to download it.

nRF Connect for Mobile

Nordic Semiconductor ASA

Scan and discover your Bluetooth Low Energy devices with nRF Connect for Mobile.



4.2★
3.15K reviews

1M+
Downloads


E
Everyone ⓘ

Install

For Android System


Step 1: Find the device in nRF Connect

- ✧ nRF Connect supports fuzzy search.
- ✧ You can search by entering a partial match.

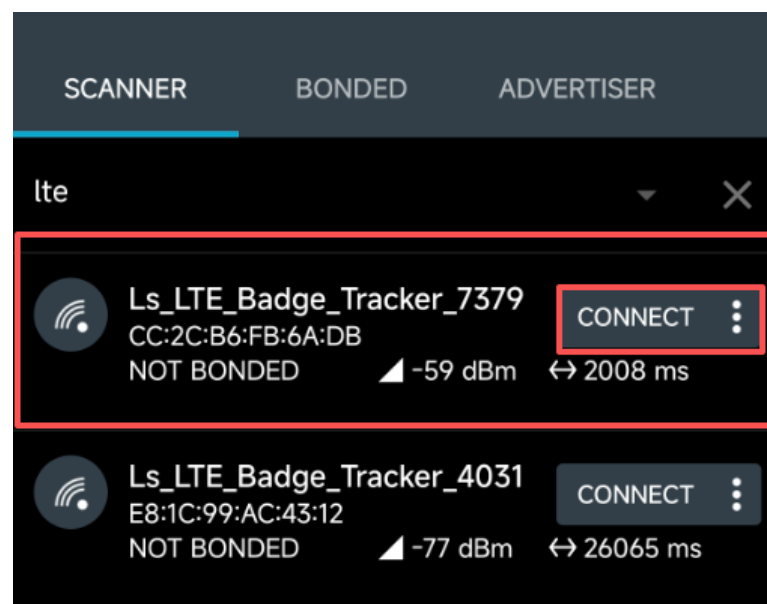


Step 2: Pair and Connect

- ✧ Click the Pair & Connect
- ✧ The page will pop up the "Pair and Connect" window again. After clicking it, a password input window will appear.
- ✧ Type "116321" to pair.

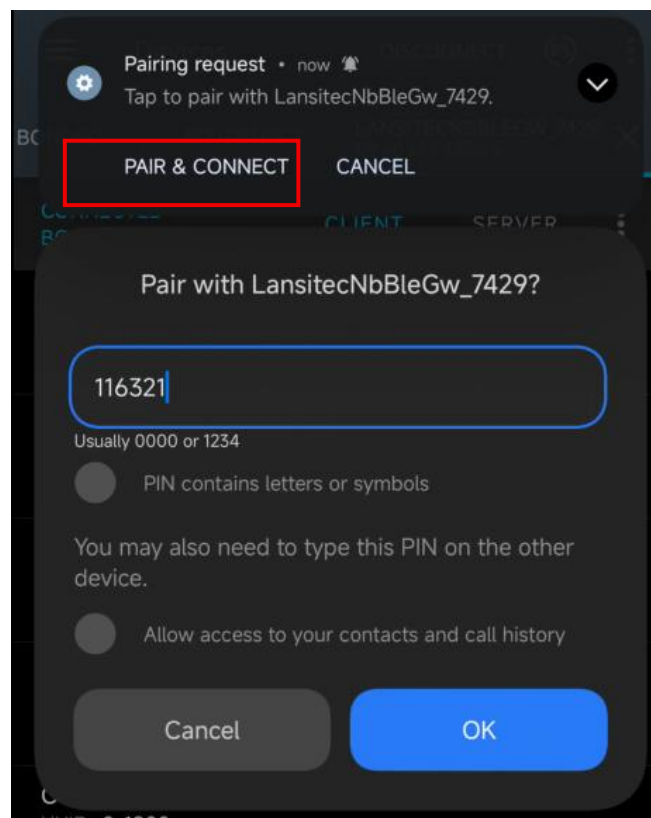


Step 3: Upload OTA Zip File


- ✧ Click the DFU Icon

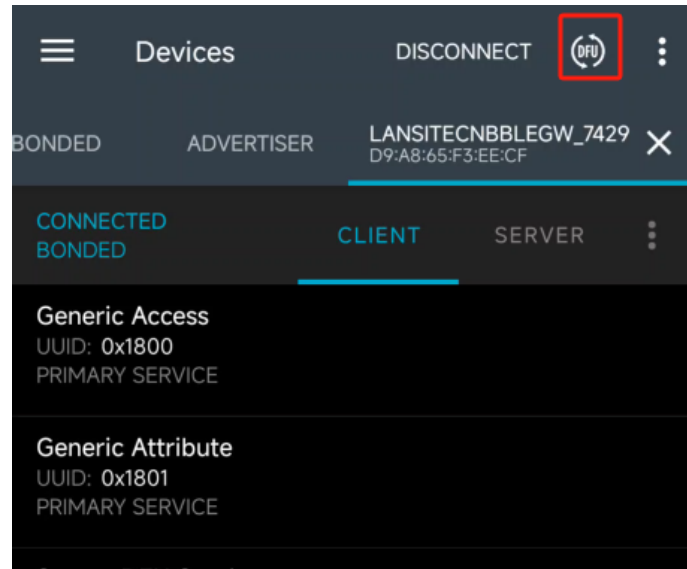

- ✧ Choose the zip file.

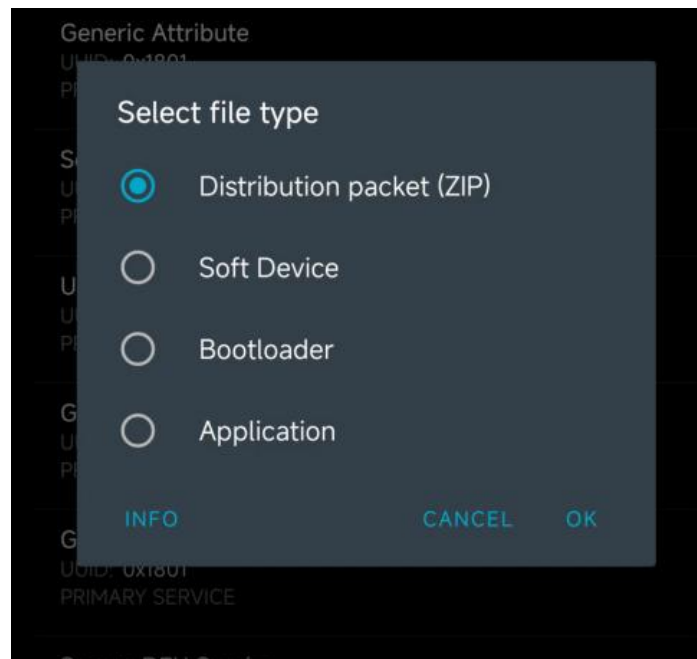


Step 4: Find and choose your OTA.zip file

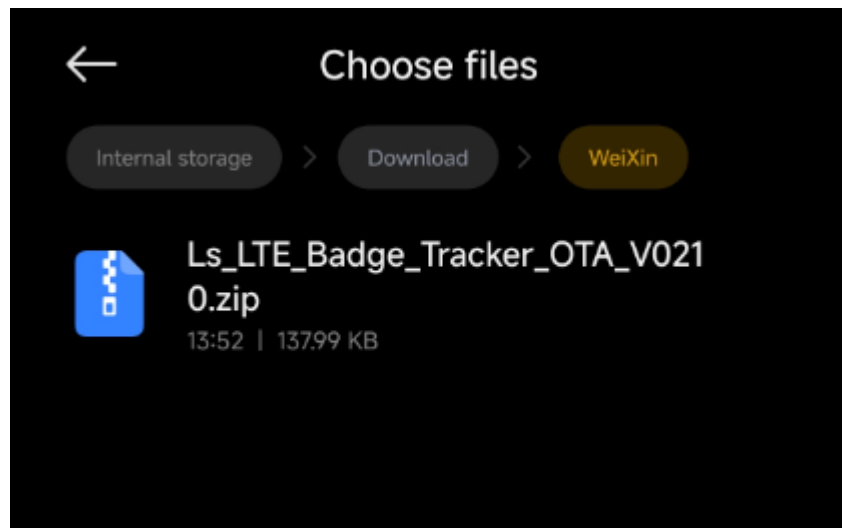


- ✧ Confirm the OTA zip file.

Step 5: Wait until the update is completed successfully.


- ✧ During the upgrade, the device will enter DFUTARG mode. Click the device on the left side of the interface to view the OTA upgrade progress.

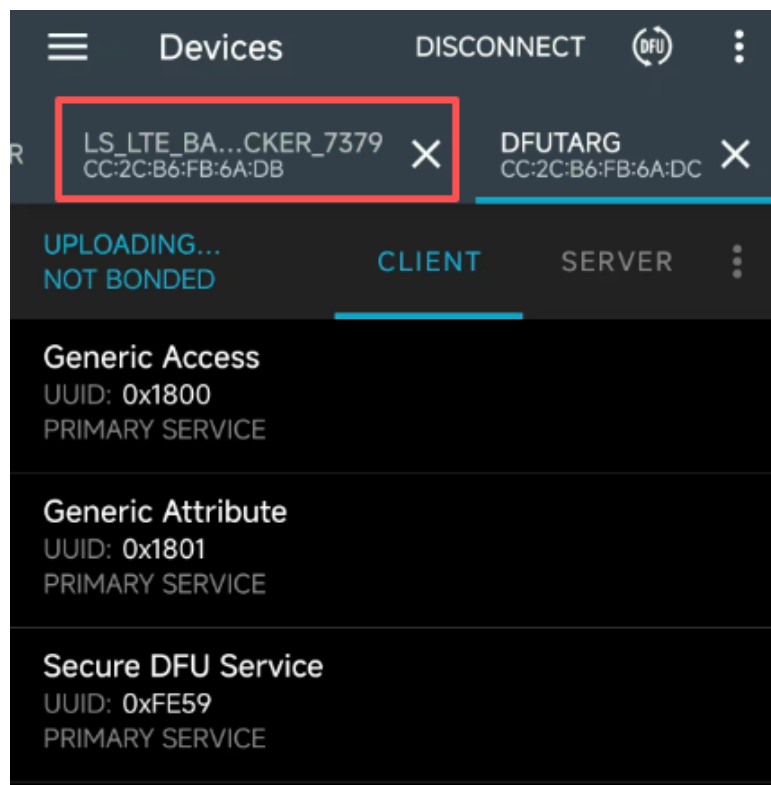


- ✧ Wait for a few tens of seconds for the process to be completed.

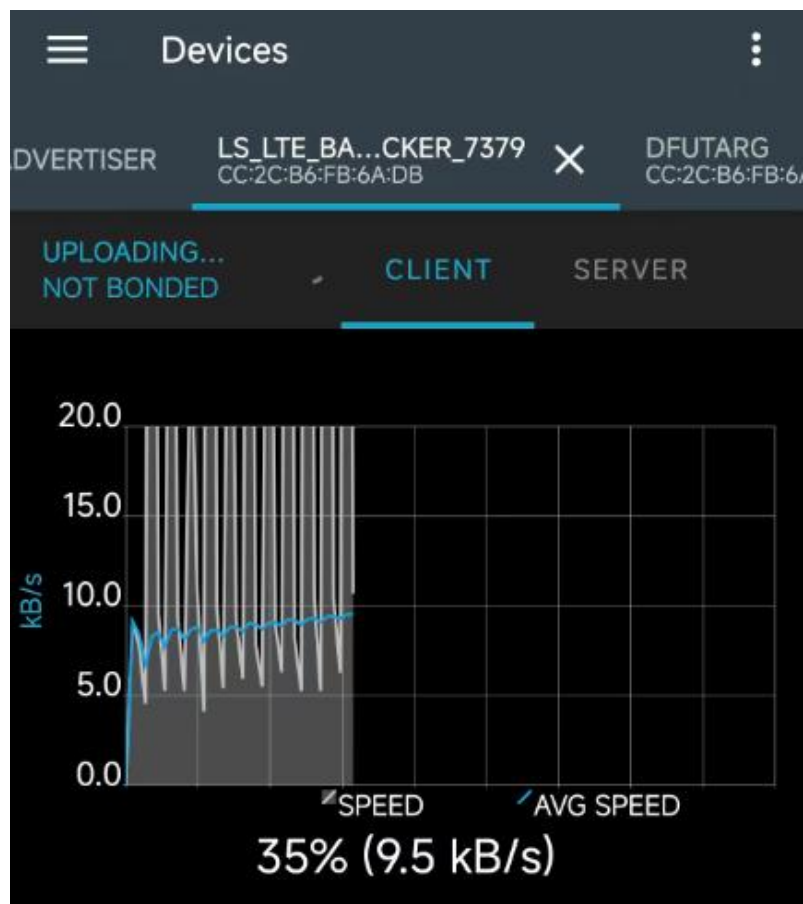

- ✧ When this prompt appears, and you hear the startup sound, it indicates that the upgrade was successful.

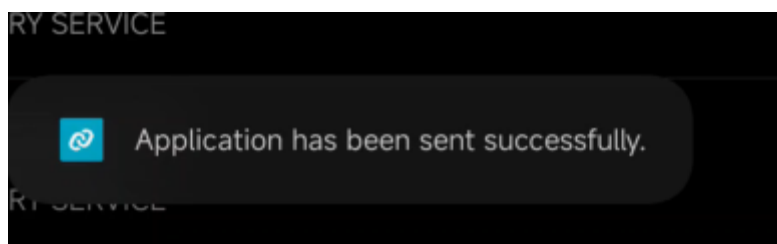

Step 7: Disconnect and Exit


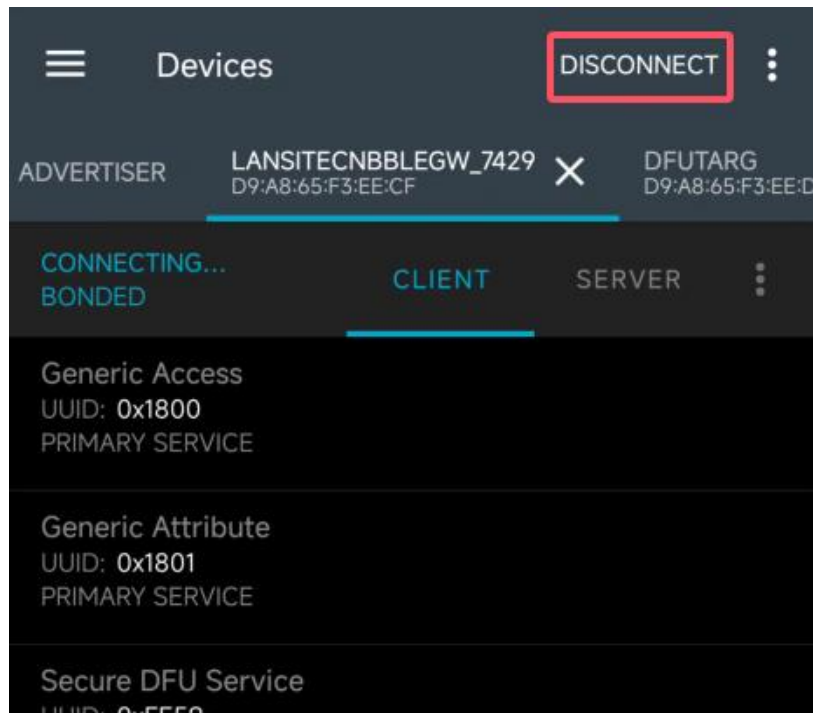


✧ The Device will reboot automatically after the update.

For iOS System


Step 1: Find the device in nRF Connect

- ✧ nRF Connect supports fuzzy search. You can search by entering a partial match.

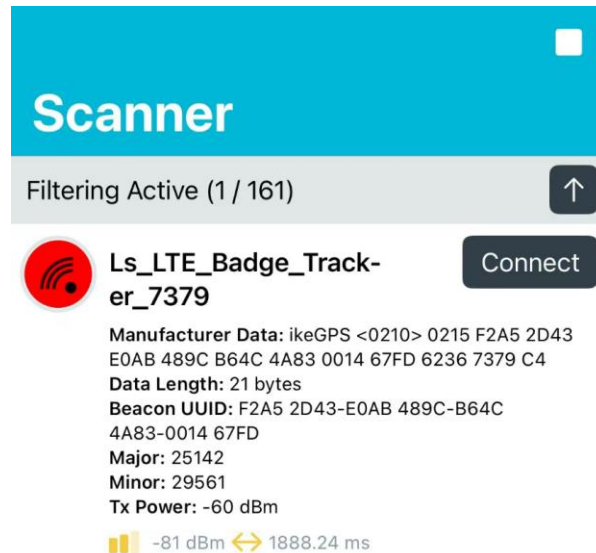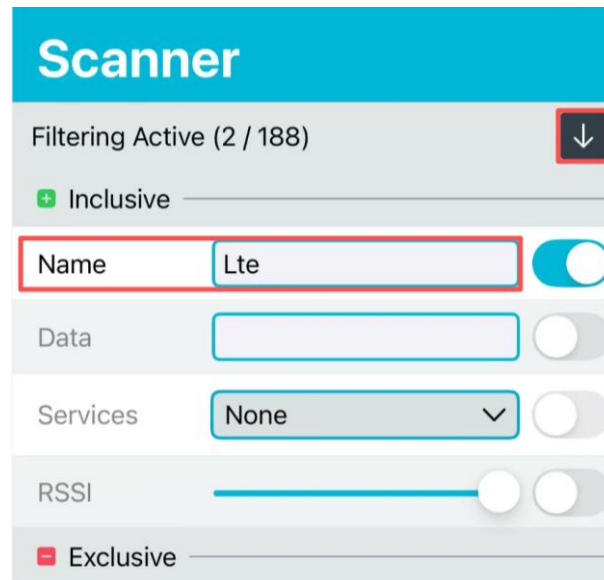


Step 2 Pair and Connect

- ✧ Click the "Connect".
- ✧ Will pop up the "Bluetooth Pairing Request" window.
- ✧ Type "116321" to pair.

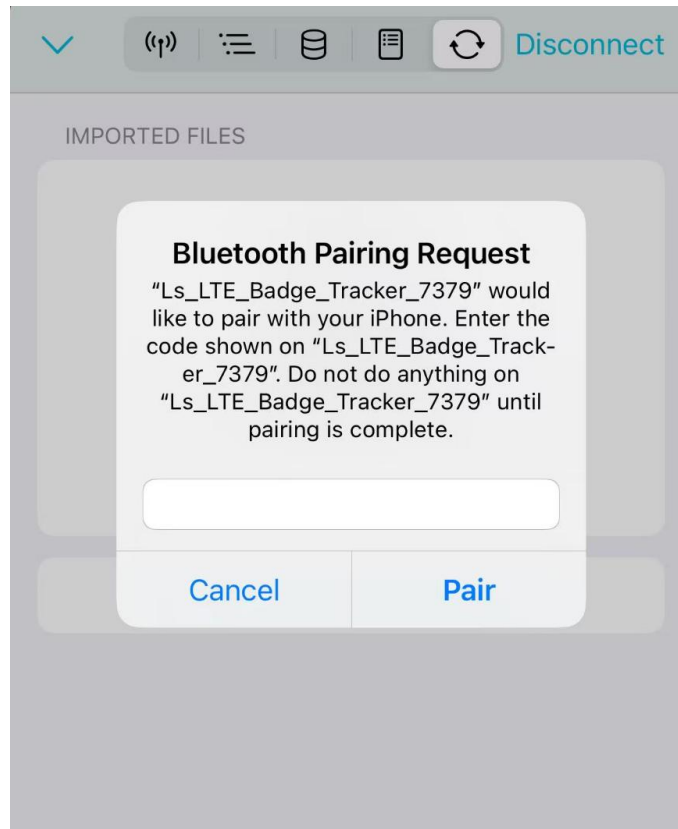


Step 3: Upload OTA Zip File


✧ Click the DFU Icon

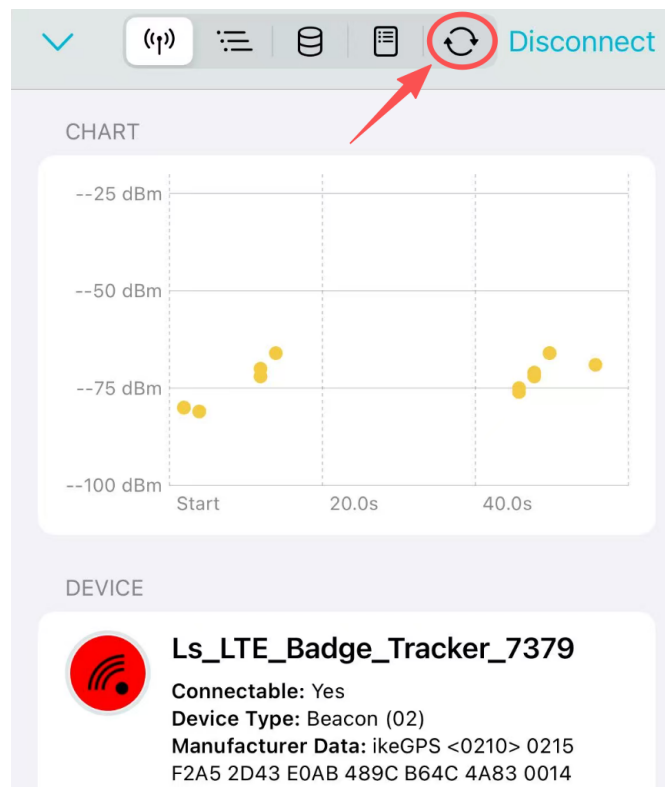


- ✧ Click the “Open Document Picker”.

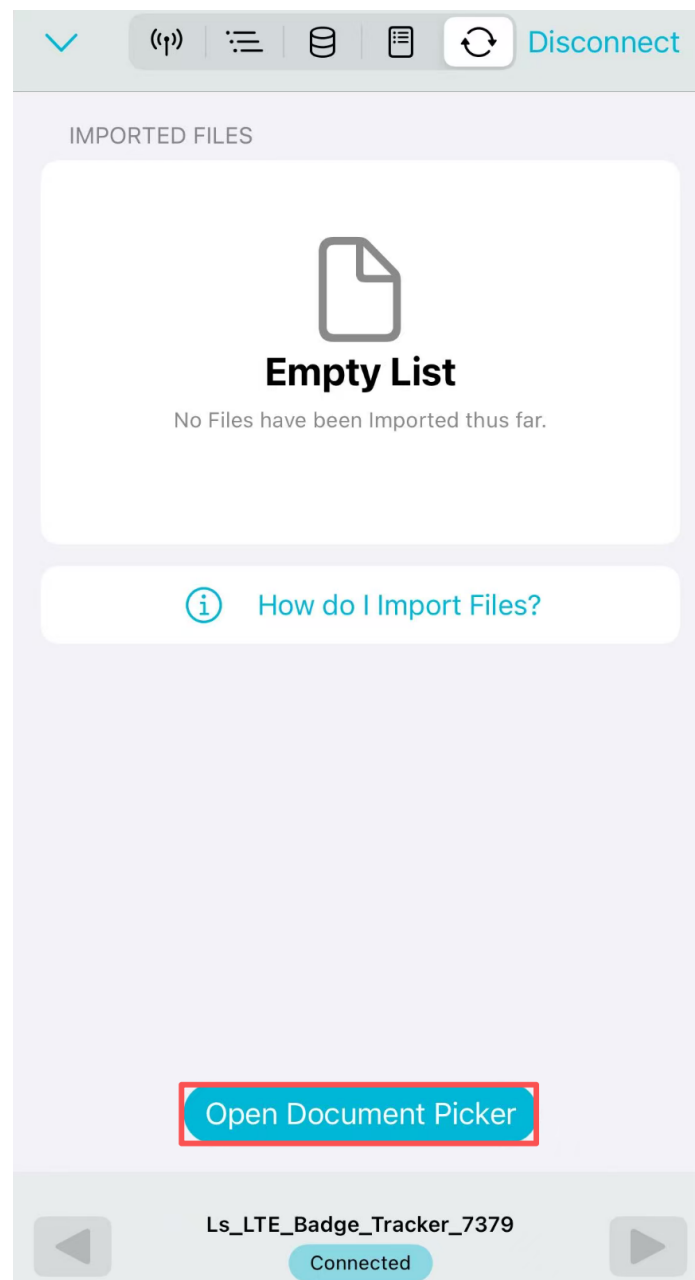

Step 4: Find and choose your OTA.zip file

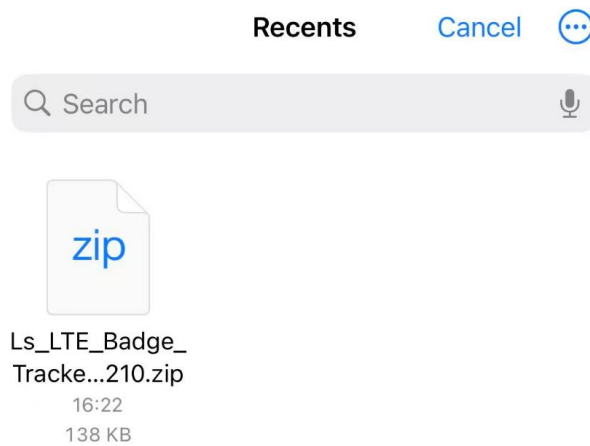


✧ Select the OTA zip file.

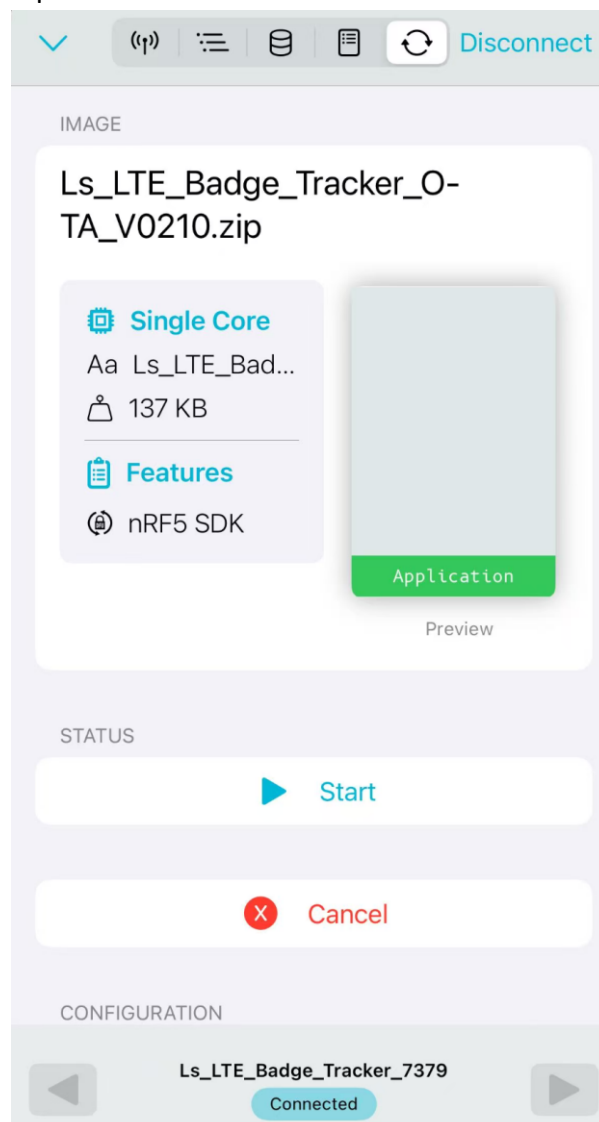


Step 5: Wait until the update is completed successfully.

✧ Click “Start” to begin the upgrade. You can see the progress bar below.

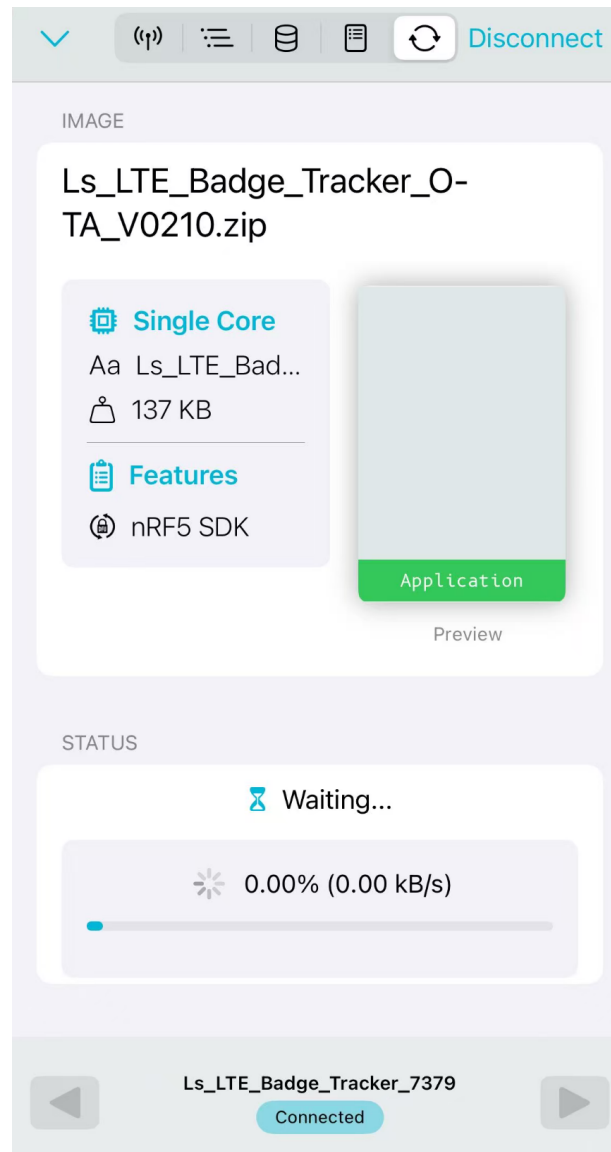

- ✧ Wait for a few seconds, and the upgrade will complete successfully.

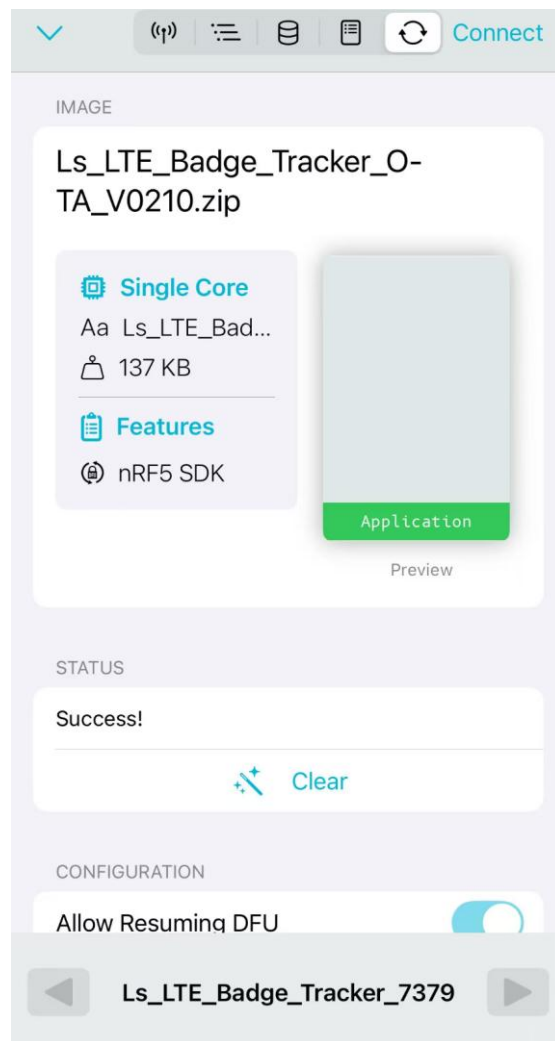

- ✧ The Device will reboot automatically after the update.