


OTA Mobile APP and User Manual


Step 1: Scan the QR code to download OTA mobile APP.



Step 2: Place the **.hex16** file to be upgraded in the **root directory of the phone**, as shown below:

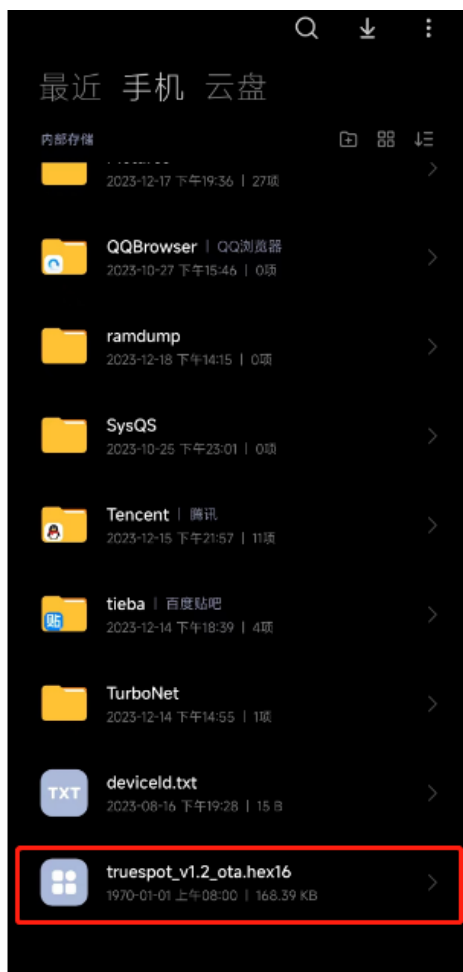

Step 3: Open the OTA upgrade APP, as shown below:

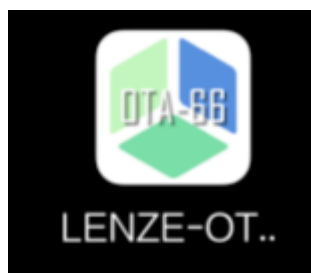

Step 4: Select the device to be upgraded based on the **device name** or **MAC address**

LENZE-OTA-66N		
RSSI		-100 dBm
	MXD57_MI	
RSSI=-96	BA:03:D0:7A:2D:71	
	R23030003	
RSSI=-83	52:01:23:03:00:03	
	Lansitec_SolarGw	
RSSI=-73	D9:0C:8D:0C:08:CA	
	5550-14HEM	Device Name
RSSI=-94	68:23:00:00:00:03	Mac Address
	GALA9021D6	
RSSI=-80	11:22:33:44:55:68	
	Lock_BD33CB1D	
RSSI=-84	5F:6F:BD:33:CB:1D	
	LE_WF-C500	
RSSI=-92	C4:45:CE:E7:BE:68	


Step 5: After selecting the device choose the **.hex16** file to upgrade.

LENZE-OTA-66N	
68:23:00:00:00:03	
truespot_v1.2_ota.hex16	

Step 6: Select the upgrade file and enter the corresponding upgrade key (ask the corresponding engineer to obtain the key), and then click "Confirm".



Step 7: The word "Start" appears to indicate that the upgrade has begun.

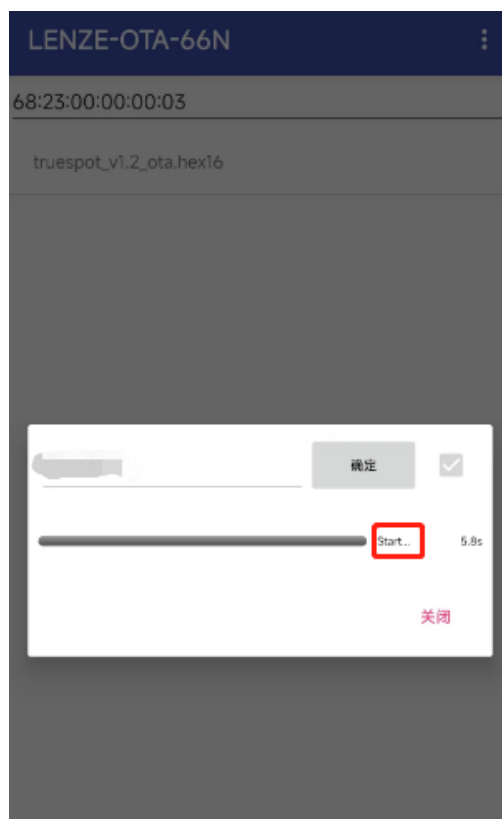

Step 8: If "Completed" appears, it means the upgrade is successful. Click "Close" to end the upgrade.

